



ENGLISH

KITCHEN SCALE VT-8001

The scale is used for weighing dry and granular products.

DESCRIPTION

- On/off/tare button «ON/OFF/ZERO»
- Display
- Measurement unit selection button «MODE»
- Weighing bowl
- Weighing platform
- Battery compartment lid

Display (2)

- “Tare” symbol
- “Negative weight” symbol
- Stable weight and steady surface symbol
- “Zero weight” symbol
- Weight of products in kilograms «kg»
- Weight of products in pounds «lb»
- Weight of products in ounces «oz»
- Weight of products in grams «g»
- Place the button (4) on the platform (5) and put the ingredients into the weighing bowl (4).
- Press the button (1) «ON/OFF/ZERO», the display (2) weight indications (15) will be set to zero.

NOTES:

- When weighing ingredients consequently, the tare symbol (7) appears on the display (2) as well.
- When weighing ingredients consequently, the “tare” symbol (7) appears on the display (2) if the weight of ingredient(s) is (are) more than 500 g.
- Use the unit for its intended purposes only, as specified in this manual. Mishandling the unit may lead to its breakage and cause harm to the user or damage to his/her property.
- Handle your scale with care, as it is a precision instrument, do not subject it to high or low temperatures, high humidity, do not expose it to direct sunlight and do not drop it.
- Avoid getting liquid into the scale body, this unit is not waterproof. Do not leave or use the scale in a room with high humidity (above 80%), make sure that the scale body does not come into contact with water or other liquids as this may cause failure of scale indications or its damage.
- Adding ingredients is available until the max. capacity (5 kg) is reached.
- Remove the ingredients from the platform, the display (2) will show the total weight of all ingredients (15) and symbol (8).
- NOTES:
- Symbols «EEEE» on the display (2) indicate that the maximal capacity of 5 kg has been exceeded. Remove products from the scale immediately to prevent their damage.
- If the scale works improperly, try switching the power off. To do this, open the battery compartment lid (6) and take out the battery. After some time install the battery back to its place and switch the scale on.
- The unit is not intended for usage by physically or mentally disabled persons (including children) or by persons lacking experience or knowledge if they are not under supervision of a person who is responsible for their safety or if they are not instructed by this person on the usage of the unit.
- Do not leave children unattended to prevent using the unit as a toy.
- For children safety reasons do not leave polyethylene bags used as packaging unattended.
- Attention! Do not allow children to play with polyethylene bags or packaging film. Danger of suffocation!**
- Do not attempt to repair the unit. Do not disassemble the unit by yourself, if any malfunction is detected or after it was dropped, unplug the unit and apply to any authorized service center at the contact addresses given in the warranty certificate and on the website www.vitek.ru.
- Transport the unit in the original package only.
- Keep the unit out of reach of children and disabled persons.

CLEANING AND CARE

- Clean the scale with a soft, slightly damp cloth and then wipe it dry.
- Do not use abrasives or solvents.
- Do not immerse the scale into water or any other liquids, do not wash it in a dishwashing machine.
- Keep the scale in a dry cool place out of reach of children and disabled persons.

IMPORTANT

- Electromagnetic compatibility**
- The electronic scale can be sensitive to electromagnetic emission of other units located in close proximity (such as mobile phones, portable radio transmitters, radio controllers and microwave ovens). If signs of such emission appear (false or inconsistent data indication on the display), relocate the scale or switch the source of interference for some time off.

USING THE SCALE

After unit transportation or storage under cold (winter) conditions, it is necessary to keep it for at least 3 hours at room temperature before switching on.

Unpack the scale, remove any advertising stickers and package materials that can prevent the unit operation.

Wipe the weighing platform (5), the scale body and the weighing bowl (4) with a soft slightly damp cloth, and then wipe dry.

Battery installation

- Press on the lid (6) lock and remove it. Insert a «CR2032» battery (supplied with the unit), strictly following the polarity.
- Place the battery compartment lid (6) back to its place.

Note: If there is an isolation insert in the battery compartment, open the battery compartment lid (6), remove the isolation insert and install the battery compartment lid (6) back to its place.

Battery replacement

- When the battery is low, the symbol «Lo» will appear on the display (2).
- Open the battery compartment lid (6), replace the old battery with a new «CR2032» battery, strictly following the polarity, then close the battery compartment lid (6).

If you are not using the scale for a long time, remove the battery from the battery compartment.

Weighing ingredients

Place the scale on a flat steady surface.

To switch the scale on press the on/off/tare button (1) «ON/OFF/ZERO» and wait till the zero indications (15) appear on the display (2).

Note: The symbols (9, 10) shown on the display (2) indicate that the scale is ready and you can start weighing.

Note: the symbol «-unst» on the display (2) indicates that the weight of the products on the scale is unstable or the scale is placed on an unsteady surface. Place the scale on a flat steady surface.

If the indications on the display (2) are not equal to zero, press the button (1) «ON/OFF/ZERO», the indications will be set to zero.

Select the required weight measurement units by pressing the button (3) «MODE». The following symbols will appear on the display (2):

«-g» – weight of product(s) in grams (14);
«-lb» – weight of product(s) in pounds (12);
«-oz» – weight of product(s) in ounces (13);
«-kg» – weight of product(s) in kilograms (11).

The display (2) will show weight of ingredient(s) (15) according to the selected measurement units.

Note: The scale will be switched off automatically after 2 minutes of non-operation.

Consecutive weighing

If you want to measure the weight of several ingredients without removing the previous ones from the platform (5) or from the bowl (4):

Guarantee

Details regarding guarantee conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

Unit operating life is 3 years

Notes

The unit preserves the right to change design, structure and specifications not affecting general principles of the unit operation.

The manufacturer preserves the right to change design, structure and specifications not affecting general principles of the unit operation without a preliminary notification due to which insignificant differences between the manual and product may be observed. If the user reveals such differences, please report them via e-mail info@vitek.ru for receipt of an updated manual.

Unit operating life is 3 years

CE

This product conforms to the EMC Directive 2014/30/EU and to the Low Voltage Directive 2014/35/EU.

Consecutive weighing

If you want to measure the weight of several ingredients without removing the previous ones from the platform (5) or from the bowl (4):

ENGLISH

KITCHEN SCALE VT-8001

The scale is used for weighing dry and granular products.

DESCRIPTION

- On/off/tare button «ON/OFF/ZERO»
- Display
- Measurement unit selection button «MODE»
- Weighing bowl
- Weighing platform
- Battery compartment lid

Display (2)

- “Tare” symbol
- “Negative weight” symbol
- Stable weight and steady surface symbol
- “Zero weight” symbol
- Weight of products in kilograms «kg»
- Weight of products in pounds «lb»
- Weight of products in ounces «oz»
- Weight of products in grams «g»
- Place the button (4) on the platform (5) and put the ingredients into the weighing bowl (4).
- Press the button (1) «ON/OFF/ZERO», the display (2) weight indications (15) will be set to zero.

NOTES:

- When weighing ingredients consequently, the tare symbol (7) appears on the display (2) as well.
- When weighing ingredients consequently, the “tare” symbol (7) appears on the display (2) if the weight of ingredient(s) is (are) more than 500 g.
- Use the unit for its intended purposes only, as specified in this manual. Mishandling the unit may lead to its breakage and cause harm to the user or damage to his/her property.
- Handle your scale with care, as it is a precision instrument, do not subject it to high or low temperatures, high humidity, do not expose it to direct sunlight and do not drop it.
- Avoid getting liquid into the scale body, this unit is not waterproof. Do not leave or use the scale in a room with high humidity (above 80%), make sure that the scale body does not come into contact with water or other liquids as this may cause failure of scale indications or its damage.
- Adding ingredients is available until the max. capacity (5 kg) is reached.
- Remove the ingredients from the platform, the display (2) will show the total weight of all ingredients (15) and symbol (8).
- NOTES:
- Symbols «EEEE» on the display (2) indicate that the maximal capacity of 5 kg has been exceeded. Remove products from the scale immediately to prevent their damage.
- If the scale works improperly, try switching the power off. To do this, open the battery compartment lid (6) and take out the battery. After some time install the battery back to its place and switch the scale on.
- The unit is not intended for usage by physically or mentally disabled persons (including children) or by persons lacking experience or knowledge if they are not under supervision of a person who is responsible for their safety or if they are not instructed by this person on the usage of the unit.
- Do not leave children unattended to prevent using the unit as a toy.
- For children safety reasons do not leave polyethylene bags used as packaging unattended.
- Attention! Do not allow children to play with polyethylene bags or packaging film. Danger of suffocation!**
- Do not attempt to repair the unit. Do not disassemble the unit by yourself, if any malfunction is detected or after it was dropped, unplug the unit and apply to any authorized service center at the contact addresses given in the warranty certificate and on the website www.vitek.ru.
- Transport the unit in the original package only.
- Keep the unit out of reach of children and disabled persons.

CLEANING AND CARE

- Clean the scale with a soft, slightly damp cloth and then wipe it dry.
- Do not use abrasives or solvents.
- Do not immerse the scale into water or any other liquids, do not wash it in a dishwashing machine.
- Keep the scale in a dry cool place out of reach of children and disabled persons.

IMPORTANT

- Electromagnetic compatibility**
- The electronic scale can be sensitive to electromagnetic emission of other units located in close proximity (such as mobile phones, portable radio transmitters, radio controllers and microwave ovens). If signs of such emission appear (false or inconsistent data indication on the display), relocate the scale or switch the source of interference for some time off.

USING THE SCALE

After unit transportation or storage under cold (winter) conditions, it is necessary to keep it for at least 3 hours at room temperature before switching on.

Unpack the scale, remove any advertising stickers and package materials that can prevent the unit operation.

Wipe the weighing platform (5), the scale body and the weighing bowl (4) with a soft slightly damp cloth, and then wipe dry.

Battery installation

- Press on the lid (6) lock and remove it. Insert a «CR2032» battery (supplied with the unit), strictly following the polarity.
- Place the battery compartment lid (6) back to its place.

Note: If there is an isolation insert in the battery compartment, open the battery compartment lid (6), remove the isolation insert and install the battery compartment lid (6) back to its place.

Battery replacement

- When the battery is low, the symbol «Lo» will appear on the display (2).
- Open the battery compartment lid (6), replace the old battery with a new «CR2032» battery, strictly following the polarity, then close the battery compartment lid (6).

If you are not using the scale for a long time, remove the battery from the battery compartment.

Weighing ingredients

Place the scale on a flat steady surface.

To switch the scale on press the on/off/tare button (1) «ON/OFF/ZERO» and wait till the zero indications (15) appear on the display (2).

Note: The symbols (9, 10) shown on the display (2) indicate that the scale is ready and you can start weighing.

Note: the symbol «-unst» on the display (2) indicates that the weight of the products on the scale is unstable or the scale is placed on an unsteady surface. Place the scale on a flat steady surface.

If the indications on the display (2) are not equal to zero, press the button (1) «ON/OFF/ZERO», the indications will be set to zero.

Select the required weight measurement units by pressing the button (3) «MODE». The following symbols will appear on the display (2):

«-g» – weight of product(s) in grams (14);
«-lb» – weight of product(s) in pounds (12);
«-oz» – weight of product(s) in ounces (13);
«-kg» – weight of product(s) in kilograms (11).

The display (2) will show weight of ingredient(s) (15) according to the selected measurement units.

Notes

The unit preserves the right to change design, structure and specifications not affecting general principles of the unit operation.

The manufacturer preserves the right to change design, structure and specifications not affecting general principles of the unit operation without a preliminary notification due to which insignificant differences between the manual and product may be observed. If the user reveals such differences, please report them via e-mail info@vitek.ru for receipt of an updated manual.

Unit operating life is 3 years

CE

This product conforms to the EMC Directive 2014/30/EU and to the Low Voltage Directive 2014/35/EU.

Consecutive weighing

If you want to measure the weight of several ingredients without removing the previous ones from the platform (5) or from the bowl (4):

1. Place the scale on a flat steady surface.

2. To switch the scale on press the on/off/tare button (1) «ON/OFF/ZERO» and wait till the zero indications (15) appear on the display (2).

Note: The symbols (9, 10) shown on the display (2) indicate that the scale is ready and you can start weighing.

Note: the symbol «-unst» on the display (2) indicates that the weight of the products on the scale is unstable or the scale is placed on an unsteady surface. Place the scale on a flat steady surface.

If the indications on the display (2) are not equal to zero, press the button (1) «ON/OFF/ZERO», the indications will be set to zero.

Select the required weight measurement units by pressing the button (3) «MODE». The following symbols will appear on the display (2):

«-g» – weight of product(s) in grams (14);
«-lb» – weight of product(s) in pounds (12);
«-oz» – weight of product(s) in ounces (13);
«-kg» – weight of product(s) in kilograms (11).

The display (2) will show weight of ingredient(s) (15) according to the selected measurement units.

Notes

The unit preserves the right to change design, structure and specifications not affecting general principles of the unit operation.

The manufacturer preserves the right to change design, structure and specifications not affecting general principles of the unit operation without a preliminary notification due to which insignificant differences between the manual and product may be observed. If the user reveals such differences, please report them via e-mail info@vitek.ru for receipt of an updated manual.

Unit operating life is 3 years

CE

This product conforms to the EMC Directive 2014/30/EU and to the Low Voltage Directive 2014/35/E

