

РУССКИЙ

КОФЕВАРКА VT-1503 BK

Кофеварка предназначена для приготовления напитка из молотых кофейных зёрен.

ОПИСАНИЕ

- Выключатель питания «I/O» со световым индикатором
- Колба для кофе
- Шкала уровня воды
- Резервуар для воды
- Крышка
- Держатель фильтра с противонакальным клапаном
- Многоразовый нейлоновый фильтр
- Подставка для подогрева колбы
- Мерная ложка

Внимание!

Для дополнительной защиты в цепи питания целесообразно установить устройство защитного отключения (УЗО) с номинальным током срабатывания, не превышающим 30 мА. Для установки УЗО обратитесь к специалисту.

РЕКОМЕНДАЦИИ ПО ЭКСПЛУАТАЦИИ И МЕРАМ БЕЗОПАСНОСТИ

Перед использованием устройства внимательно ознакомьтесь с руководством по эксплуатации. Сохраняйте данное руководство в течение всего срока эксплуатации. Неправильное обращение с устройством может привести к его поломке, причинению вреда пользователю или его имуществу.

- Перед первым включением убедитесь в том, что рабочее напряжение кофеварки соответствует напряжению в электрической сети.
- Используйте кофеварку только по её прямому назначению.
- Не используйте устройство вне помещений.
- Устанавливайте кофеварку на сухой ровной устойчивой поверхности, не ставьте устройство на край стола.
- Не используйте кофеварку в непосредственной близости от источников тепла, влаги или открытого пламени.
- Не допускайте, чтобы электрический шнур свешивался со стола, и следите, чтобы шнур не прикасался к острым и горячим поверхностям.
- Во избежание удара электрическим током не погружайте кофеварку, сетевой шнур или вилку сетевого шнура в воду или в любые другие жидкости.
- Не включайте кофеварку без воды.
- Используйте кофеварку только при наличии установленной колбы для кофе.
- Никогда не оставляйте работающую кофеварку без присмотра.
- Не дотрагивайтесь до корпуса кофеварки мокрыми руками.
- Во избежание ожога не дотрагивайтесь до горячих поверхностей кофеварки в процессе приготовления кофе и сразу после выключения устройства. Дайте кофеварке остыть.
- Во время приготовления кофе вода под давлением пара проходит через молотый кофе, поэтому запрещается наклоняться над кофеваркой, открывать держатель фильтра и извлекать съёмный фильтр.
- Используйте только чистую холодную воду.
- Не снимайте колбу с подставки в процессе приготовления кофе.
- Не используйте колбу для иных целей, не ставьте её на электрические и газовые плиты, не используйте колбу в микроволновых печах.
- Отключайте кофеварку от электросети сразу перед чистой или в случае, если вы устройством не пользуетесь.
- Отключая устройство от электрической сети, не тяните за сетевой шнур, а держите его за вилку сетевого шнура.
- Дети должны находиться под присмотром для недопущения игр с прибором.
- Из соображений безопасности детей не оставляйте полиэтиленовые пакеты, используемые в качестве упаковки, без присмотра.

Внимание! Не разрешайте детям играть с полиэтиленовыми пакетами или упаковочной плёнкой. Опасность удушья!

- Данное устройство не предназначено для использования детьми.
- Во время работы и оставаясь размещайте устройство в местах, недоступных для детей.
- Не разрешайте детям прикасаться к устройству и к сетевому шнуру во время работы устройства.
- Прибор не предназначен для использования лицами (включая детей) с пониженными физическими, сенсорными или умственными способностями или при отсутствии у них жизненного опыта или знаний, если они не находят под присмотром или не инструктированы об использовании прибора лицом, ответственным за их безопасность.
- Периодически проверяйте состояние сетевого шнура и вилки сетевого шнура.
- При повреждении шнура питания его замену во избежание опасности должны производить изготовитель, сервисная служба или подобный квалифицированный персонал.
- Запрещается самостоятельно ремонтировать прибор. Не разбирайте прибор самостоятельно, при возникновении любых неисправностей, а также после падения устройства выключите прибор из электрической розетки и обратитесь в любой авторизованный (уполномоченный) сервисный центр по контактным адресам, указанным в гарантийном талоне и на сайте www.vitek.ru
- Во избежание повреждений перевозите устройство только в заводской упаковке.
- Храните устройство в сухом прохладном месте, недоступном для детей и людей с ограниченными возможностями.

ДАННЫЙ ПРИБОР ПРЕДНАЗНАЧЕН ДЛЯ ИСПОЛЬЗОВАНИЯ ТОЛЬКО В БЫТОВЫХ УСЛОВИЯХ. ЗАПРЕЩАЕТСЯ КОММЕРЧЕСКОЕ ИСПОЛЬЗОВАНИЕ И ИСПОЛЬЗОВАНИЕ ПРИБОРА В ПРОИЗВОДСТВЕННЫХ ЗОНАХ И РАБОЧИХ ПОМЕЩЕНИЯХ.

ПЕРЕД ПЕРВЫМ ИСПОЛЬЗОВАНИЕМ

После транспортировки или хранения устройства при пониженной температуре необходимо выдержать его при комнатной температуре не менее трёх часов.

Перед приготовлением кофе проведите пробный цикл варки, используя только воду, не засыпая молотый кофе в фильтр.

- Извлеките кофеварку из упаковки, удалите любые наклейки, мешающие работе устройства.
- Убедитесь в том, что рабочее напряжение кофеварки соответствует напряжению в электрической сети.
- Откройте крышку (5), извлеките держатель фильтра (6) и нейлоновый фильтр (7).
- Промойте тёплой водой с нейтральным моющим средством все съёмные детали: колбу для кофе (2), держатель фильтра (6), нейлоновый фильтр (7) и мерную ложку (9). Затем ополосните их и высушите.
- Установите держатель фильтра (6) на место.
- Вставьте нейлоновый фильтр (7) в держатель (6).
- Наполните колбу для кофе (2) чистой водой приблизительно наполовину.
- Вылейте воду из колбы (2) в резервуар (4).
- Закройте крышку (5) и установите колбу (2) на подставку (8).
- Вставьте вилку сетевого шнура в электрическую розетку и включите кофеварку, установив выключатель питания (1) в положение «I», при этом загорится световой индикатор, расположенный в выключателе.
- После того как в резервуаре (4) не останется воды, выключите кофеварку, установив выключатель питания (1) в положение «O».
- Дайте устройству остыть в течение 5 минут и вылейте воду из колбы (2).

ПРИГОТОВЛЕНИЕ КОФЕ

Готовый кофе получается в процессе однократного прохождения горячей воды через слой молотого кофе в фильтре (7). Вкус готового напитка зависит от качества исходного продукта, поэтому рекомендуется использовать хорошо прожаренные и свежемолотые зёрна кофе.

- Откройте крышку (5).
- Вставьте фильтр (7) в держатель (6).
- Мерной ложкой (9) отмерьте необходимое количество молотого кофе и засыпьте его в фильтр (7). В среднем на одну чашку кофе требуется 6 грамм молотого кофе, точное количество подбирайте по вкусу.
- Наполните резервуар (4) холодной водой до требуемого уровня. Уровень воды определите с помощью шкалы (3) с разметкой в чашках.
- Закройте крышку (5).
- Установите колбу (2) на подставку (8).
- Вставьте вилку сетевого шнура в электрическую розетку. Включите кофеварку, переведя выключатель питания (1) в положение «I», при этом загорится световой индикатор, кофеварка начнёт работать.
- Когда вся вода пройдёт через фильтр, выключите кофеварку, установив выключатель питания (1) в положение «O».
- Чтобы кофе оставался горячим, оставьте колбу (2) на подставке (8) и не выключайте кофеварку выключателем (1).

Внимание!

Когда отпадёт необходимость в подогреве колбы (2), обязательно выключите кофеварку, переведя выключатель (1) в положение «O».

- Вода под давлением пара проходит через молотый кофе, поэтому во время приготовления кофе запрещается наклоняться над кофеваркой, открывать крышку (5) и вынимать держатель фильтра (6).**
- Вкус готового напитка зависит от качества исходного продукта, поэтому рекомендуется использовать свежемолотый кофе из хорошо прожаренных зёрен.**

ЧИСТКА И УХОД

- Воский раз перед чистой отключайте прибор от электросети.
- Дайте кофеварке полностью остыть и протрите внешние поверхности мягкой слегка влажной тканью, затем вытрите насухо.
- Для удаления загрязнений используйте мягкие чистящие средства, используйте металлические щётки и абразивные моющие средства.
- Все съёмные детали промойте тёплой водой с нейтральным моющим средством, ополосните, протрите насухо и установите на место.
- Не погружайте кофеварку в воду или в другие жидкости.
- Не помещайте кофеварку в посудомоечную машину.

УДАЛЕНИЕ НАКИПИ

- Регулярно очищайте кофеварку от накипи.
- Для удаления накипи используйте рекомендованные средства, которые можно приобрести в торговой сети, и строго следуйте указаним на их упаковке.
- После удаления накипи тщательно промойте кофеварку. Для этого залейте в резервуар (4) чистую воду и включите устройство, не засыпая кофе.
- Повторите цикл несколько раз.

ХРАНЕНИЕ

- Прежде чем убрать устройство на хранение, отключите его от электросети и дайте ему полностью остыть.
- Произведите чистку устройства.
- Храните устройство в сухом прохладном месте, недоступном для детей и людей с ограниченными возможностями.

КОМПЛЕКТ ПОСТАВКИ

Кофеварка – 1 шт.
Съёмный держатель с нейлоновым фильтром – 1 шт.
Колба для кофе – 1 шт.
Мерная ложка – 1 шт.
Инструкция – 1 шт.
Гарантийный талон – 1 шт.

ТЕХНИЧЕСКИЕ ХАРАКТЕРИСТИКИ

Электропитание: 220-240 В ~ 50 Гц
Номинальная потребляемая мощность: 900 Вт
Объём воды: 1200 мл (12 чашек)

УТИЛИЗАЦИЯ



В целях защиты окружающей среды, после окончания срока службы прибора и элементов питания (если входят в комплект), не выбрасывайте их вместе с обычными бытовыми отходами, передайте прибор и элементы питания в специализированные пункты для дальнейшей утилизации.

Отходы, образующиеся при утилизации изделий, подлежат обязательному сбору с последующей утилизацией в установленном порядке.

Для получения дополнительной информации об утилизации данного продукта обратитесь в местный муниципалитет, службу утилизации бытовых отходов или в магазин, где Вы приобрели данный продукт.

Производитель сохраняет за собой право изменять дизайн, конструкцию и технические характеристики, не влияющие на общие принципы работы устройства, без предварительного уведомления, из-за чего между инструкцией и изделием могут наблюдаться незначительные различия. Если пользователь обнаружит такие несоответствия, просим сообщить об этом по электронной почте info@vitek.ru для получения обновленной версии инструкции.

Срок службы устройства – 3 года



Данное изделие соответствует всем требованиям европейским и российским стандартам безопасности и гигиены.

ИЗГОТОВИТЕЛЬ: СТАР ПЛЮС ЛИМИТЕД (STAR PLUS LIMITED)

МОСТОАХОЖДЕНИЕ И ПОЧТОВЫЙ АДРЕС ДЛЯ СВЯЗИ:
ЮНИТ А, 15-Й ЭТАЖ, КЭИСИ АБЕРДИН ХАУС, №38, ХЕНГ ИП РОУД, БОНГ ЧУК ХАНГ, ГОНКОНГ, КНР

ИМПОРТЕР И УПОЛНОМОЧЕННОЕ ИЗГОТОВИТЕЛЕМ ЛИЦО:
ООО «ВИТЕК.РУС»

МОСТОАХОЖДЕНИЕ И ПОЧТОВЫЙ АДРЕС ДЛЯ СВЯЗИ:
РФ, 117452, г. МОСКВА, ЧЕРНОМОРСКИЙ БУЛЬВАР, ДОМ 17, КОРП. 1, ЭТАЖ 4, ОФИС 401, КАБ. 1.

Тел.: +7 (499) 685-48-18, e-mail: info@vitek.ru

Отвечественность за несоответствие продукции требованиям технических регламентов Таможенного союза возложена на уполномоченное изготовителем лицо.

www.vitek.ru

ТЕЛЕФОН ДЛЯ СПРАВOK: 8-800-100-18-30
СДЕЛАНО В КНР

ENGLISH

COFFEE MAKER VT-1503 BK

The coffee maker is intended for making drinks of ground coffee beans.

DESCRIPTION

- Power switch «I/O» with a light indicator
- Coffee flask
- Water level scale
- Water tank
- Lid
- Filter holder with anti-drip valve
- Reusable nylon filter
- Flask heating base
- Measuring spoon

Attention!

For additional protection it is reasonable to install a residual current device (RCD) with nominal operating current not exceeding 30 mA. To install an RCD, contact a specialist.

USAGE AND SAFETY INSTRUCTIONS

Read these instructions carefully before using the unit. Keep this instruction during the whole operation period. Mishandling the unit can lead to its breakage and cause harm to the user or damage to his/her property.

- Before switching the unit on for the first time, make sure that the operating voltage of the coffee maker corresponds to the voltage of your mains.
- Use the coffee maker according to its intended purpose only.
- Do not use the unit outdoors.
- Place the coffee maker on a dry flat stable surface; do not place it on the edge of the table.
- Do not use the coffee maker near heat and moisture sources and near open flame.
- Do not let the power cord hang from the edge of a table, and make sure it does not touch sharp and hot surfaces.
- To avoid electric shock, do not immerse the coffee maker, power cord or power plug into water or other liquids.
- Do not switch the coffee maker on if the water tank is empty.
- Use the coffee maker only with the coffee flask installed.
- Never leave the operating coffee maker unattended.
- Do not touch the coffee maker body with wet hands.
- To avoid burns, do not touch hot surfaces of the coffee maker during coffee making and right after switching the unit off. Let the coffee maker cool down.
- During the coffee making process, water passes through ground coffee under steam pressure, so do not bend over the coffee maker, do not open the filter holder and do not remove the filter.
- Use only pure cold water.
- Do not remove the flask from the base during coffee making.
- Do not use the flask for other purposes, do not place it on electric and gas cookers and do not use the flask in microwave ovens.

- Unplug the coffee maker before cleaning or when you are not using it.
- When unplugging the unit, pull the plug but not the cord.
- Do not leave children unattended to avoid them using the unit as a toy.
- For children safety reasons do not leave polyethylene bags, used as packaging, unattended.

Attention! Do not allow children to play with polyethylene bags or packaging film. Danger of suffocation!

- This unit is not intended for usage by children.
- Place the unit out of reach of children during the operation and cooling down.
- Do not allow children to touch the unit body and the power cord during the unit operation.
- The unit is not intended to be used by people with physical, sensory or mental disabilities (including children) or by persons lacking experience or knowledge if they are not under supervision of a person who is responsible for their safety or if they are not instructed by this person on the usage of the unit.
- Check the power cord and plug periodically.
- If the power cord is damaged, it should be replaced by the manufacturer, a maintenance service or similar qualified personnel to avoid danger.
- Do not repair the unit by yourself. Do not disassemble the unit by yourself, if any malfunction is detected or after it was dropped, unplug the unit and apply to any authorized service center from the contact address list given in the warranty certificate and on the website www.vitek.ru
- To avoid damages, transport the unit in original package only.
- Keep the unit in a dry cool place out of reach of children and disabled persons.


КОМПЛЕКТ ПОСТАВКИ

Кофеварка – 1 шт.
Съёмный держатель с нейлоновым фильтром – 1 шт.
Колба для кофе – 1 шт.
Мерная ложка – 1 шт.
Инструкция – 1 шт.
Гарантийный талон – 1 шт.

ТЕХНИЧЕСКИЕ ХАРАКТЕРИСТИКИ

Электропитание: 220-240 В ~ 50 Гц
Номинальная потребляемая мощность: 900 Вт
Объём воды: 1200 мл (12 чашек)

УТИЛИЗАЦИЯ

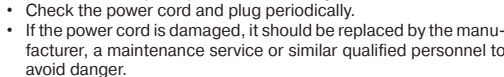

В целях защиты окружающей среды, после окончания срока службы прибора и элементов питания (если входят в комплект), не выбрасывайте их вместе с обычными бытовыми отходами, передайте прибор и элементы питания в специализированные пункты для дальнейшей утилизации.

Отходы, образующиеся при утилизации изделий, подлежат обязательному сбору с последующей утилизацией в установленном порядке.

Для получения дополнительной информации об утилизации данного продукта обратитесь в местный муниципалитет, службу утилизации бытовых отходов или в магазин, где Вы приобрели данный продукт.

THIS UNIT IS INTENDED FOR HOUSEHOLD USE ONLY. ITS COMMERCIAL USAGE AND USAGE IN PRODUCTION AREAS AND WORK SPACES IS PROHIBITED.

BEFORE THE FIRST USE

After unit transportation or storage at low temperature keep it for at least three hours at room temperature before switching on.

Before making coffee perform a test boiling cycle, using water only, without adding ground coffee into the filter.

- Unpack the coffee maker, remove any stickers that can prevent unit operation.
- Make sure that operating voltage of the coffee maker corresponds to the voltage of your mains.
- Open the lid (5), remove the filter holder (6) and the nylon filter (7).
- Wash all removable parts in warm water with a neutral detergent: the coffee flask (2), the filter holder (6), the nylon filter (7) and the measuring spoon (9). Then rinse them and dry.
- Note: For easy removal the filter holder (6) and the nylon filter (7) are provided with a foldable handle.
- Install the filter holder (6) back to its place.
- Insert the nylon filter (7) into the holder (6).
- Fill about one half of the coffee flask (2) with pure water.
- Pour the water from the flask (2) to the water tank (4).
- Close the lid (5) and put the flask (2) on the base (8).
- Insert the power plug into the mains socket; switch the coffee maker on, setting the switch (1) to the «I» position, the power indicator in the switch will light up.
- After the water tank (4) is empty, switch the coffee maker off setting the power switch (1) to the «O» position.

- Let the unit cool down for 5 minutes and pour the water out from the flask (2).

MAKING COFFEE

Ready coffee is made by single passing of hot water through the layer of ground coffee in the filter (7). The taste of drink depends on the quality of raw products, therefore we recommend to use well-roasted and fresh-ground coffee beans.

- Open the lid (5).
- Insert the filter (7) into the holder (6).
- Measure the required amount of ground coffee with the measuring spoon (9) and put it into the filter (7). 6 grams of ground coffee per one coffee cup is required on average; adjust the quantity according to your taste.
- Fill the water tank (4) with cold water up to the required level. Determine the water level using the scale (3) marked out in cups.
- Close the lid (5).
- Put the flask (2) on the base (8).
- Insert the power plug into the mains socket. Switch the coffee maker on by setting the power switch (1) to the «I» position, the light indicator will light up and the coffee maker will start operating.
- After all water passes through the filter, switch the coffee maker off by setting the power switch (1) to the «O» position.
- To keep the coffee hot, leave the flask (2) on the base (8) and do not switch the coffee maker off with the switch (1).

Attention!

When you no longer need to heat the flask (2), switch the coffee maker off by setting the switch (1) to the «O» position.

- Water passes through ground coffee under steam pressure, so do not bend over the coffee maker, do not open the lid (5) and do not remove the filter holder (6).**
- The taste of the ready drink depends on the quality of the raw product, therefore we recommend using fresh-ground coffee made of well-roasted beans.**

CLEANING AND CARE

- Unplug the unit every time before cleaning.
- Let the coffee maker cool down completely and clean the outer surfaces of the unit body with a soft slightly damp cloth, then wipe dry.
- Use soft detergents to remove dirt, do not use metal brushes and abrasive detergents.
- Wash all removable parts with warm water and neutral detergent, then rinse them, dry thoroughly and install back to their places.
- Do not immerse the coffee maker into water or other liquids.
- Do not wash the unit in a dishwashing machine.

DESCALING

- Clean the coffee maker from scale regularly.
- To remove scale, use recommended substances, which you can buy in retail stores, and strictly follow the instructions on the package.
- After descaling, wash the coffee maker thoroughly. To do this, pour pure water into the tank (4) and switch the unit on without adding coffee.
- Repeat the cycle several times.

STORAGE

- Before taking the unit away for storage, unplug it and let the unit cool down completely.
- Clean the unit.
- Keep the unit in a dry cool place out of reach of children and disabled persons.

DELIVERY SET

Coffee maker – 1 pc.
Removable holder with a nylon filter – 1 pc.
Coffee flask – 1 pc.
Measuring spoon – 1 pc.
Instruction manual – 1 pc.
Warranty certificate – 1 pc.

TECHNICAL SPECIFICATIONS

Power supply: 220-240 V ~ 50 Hz
Rated input power: 900 W
Water capacity: 1200 ml (12 cups)

RECYCLING



For environment protection do not throw out the unit and the batteries (if included), do not discard the unit and the batteries with usual household waste after the service life expiration; apply to specialized centers for further recycling.

The waste generated during the disposal of the unit is subject to mandatory collection and consequent disposal in the prescribed manner.

For further information about recycling of this product apply to a local municipal administration, a disposal service or to the shop where you purchased this product.

THE MANUFACTURER PRESERVES THE RIGHT TO CHANGE DESIGN, STRUCTURE AND SPECIFICATIONS NOT AFFECTING GENERAL PRINCIPLES OF THE UNIT OPERATION WITHOUT A PRELIMINARY NOTIFICATION DUE TO WHICH INSIGNIFICANT DIFFERENCES BETWEEN THE MANUAL AND PRODUCT MAY BE OBSERVED.

If the user reveals such differences, please report them via e-mail info@vitek.ru for receipt of an updated manual.

Unit operating life is 3 years



The manufacturer preserves the right to change design, structure and specifications not affecting general principles of the unit operation without a preliminary notification due to which insignificant differences between the manual and product may be observed.

If the user reveals such differences, please report them via e-mail info@vitek.ru for receipt of an updated manual.

Unit operating life is 3 years

The manufacturer preserves the right to change design, structure and specifications not affecting general principles of the unit operation without a preliminary notification due to which insignificant differences between the manual and product may be observed.

If the user reveals such differences, please report them via e-mail info@vitek.ru for receipt of an updated manual.

Unit operating life is 3 years

The manufacturer preserves the right to change design, structure and specifications not affecting general principles of the unit operation without a preliminary notification due to which insignificant differences between the manual and product may be observed.

If the user reveals such differences, please report them via e-mail info@vitek.ru for receipt of an updated manual.

Unit operating life is 3 years

The manufacturer preserves the right to change design, structure and specifications not affecting general principles of the unit operation without a preliminary notification due to which insignificant differences between the manual and product may be observed.

If the user reveals such differences, please report them via e-mail info@vitek.ru for receipt of an updated manual.

Unit operating life is 3 years

The manufacturer preserves the right to change design, structure and specifications not affecting general principles of the unit operation without a preliminary notification due to which insignificant differences between the manual and product may be observed.

If the user reveals such differences, please report them via e-mail info@vitek.ru for receipt of an updated manual.

Unit operating life is 3 years

The manufacturer preserves the right to change design, structure and specifications not affecting general principles of the unit operation without a preliminary notification due to which insignificant differences between the manual and product may be observed.

If the user reveals such differences, please report them via e-mail info@vitek.ru for receipt of an updated manual.

Unit operating life is 3 years

The manufacturer preserves the right to change design, structure and specifications not affecting general principles of the unit operation without a preliminary notification due to which insignificant differences between the manual and product may be observed.

If the user reveals such differences, please report them via e-mail info@vitek.ru for receipt of an updated manual.

Unit operating life is 3 years

The manufacturer preserves the right to change design, structure and specifications not affecting general principles of the unit operation without a preliminary notification due to which insignificant differences between the manual and product may be observed.

If the user reveals such differences, please report them via e-mail info@vitek.ru for receipt of an updated manual.

Unit operating life is 3 years

The manufacturer preserves the right to change design, structure and specifications not affecting general principles of the unit operation without a preliminary notification due to which insignificant differences between the manual and product may be observed.

If the user reveals such differences, please report them via e-mail info@vitek.ru for receipt of an updated manual.

Unit operating life is 3 years

The manufacturer preserves the right to change design, structure and specifications not affecting general principles of the unit operation without a preliminary notification due to which insignificant differences between the manual and product may be observed.

If the user reveals such differences, please report them via e-mail info@vitek.ru for receipt of an updated manual.

Unit operating life is 3 years

The manufacturer preserves the right to change design, structure and specifications not affecting general principles of the unit operation without a preliminary notification due to which insignificant differences between the manual and product may be observed.

If the user reveals such differences, please report them via e-mail info@vitek.ru for receipt of an updated manual.

Unit operating life is 3 years

